



触摸屏套件 说明书 _ 触摸屏套件 _ 配件 _ 英 _75×105_ 铜板纸 _ 双面彩印风琴折 _V1.0_Ender-3 系列触摸屏使用

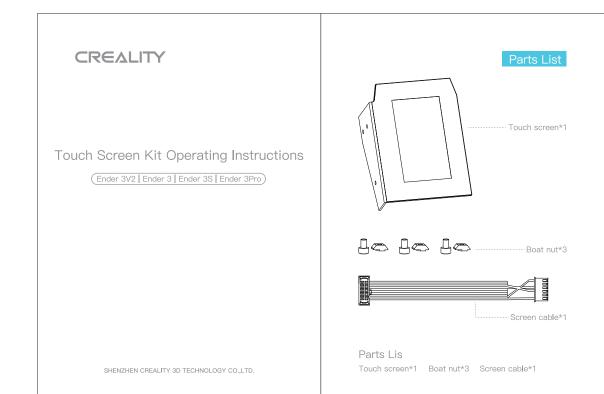

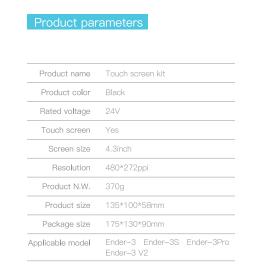


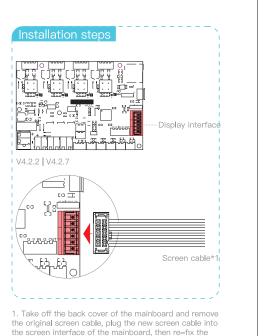

back cover.

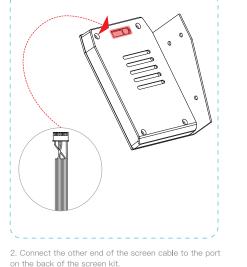

,-----

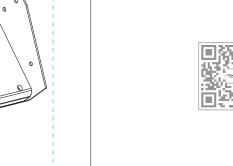


SHENZHEN CREALITY 3D TECHNOLOGY CO., LTD.

Add: 18F, JinXiuHongDu Building, Meilong Blvd.,
Longhua Dist., Shenzhen, China 518131


Official Website: www.creality.com Tel: +86 755–8523 4565

E-mail: info@creality.com cs@creality.com

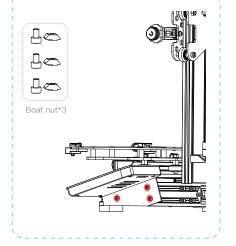

,-----

3. Fix the touch screen in the chute on the side of the bottom profile through the boat nut.

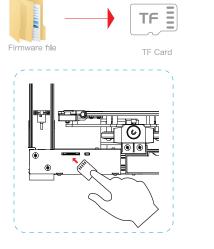

4. Enter the browser to visit https://www.oreality.com/download, download the firmware corresponding to the mainboard according to the model, and write it into the blank memory card. Insert the memory card when the 3D printer is off. CREALITY

5. Turn on the power and wait for about 15 seconds, it will

enter the main interface after the progress bar is

successfully flashed, and can be used after re-leveling.

completed, which indicates that the firmware is

3D Printing Industry Evangelist